


CHEVROLET

5.0" Bore Center

CFE 5.2 use individual

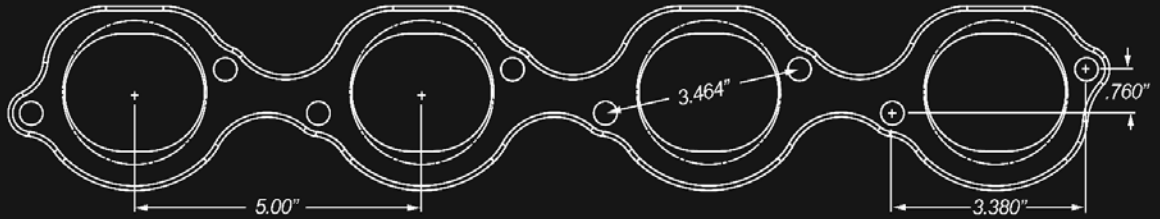

C854xx

Round C85427 2.25" Brodix PB5000
 C85428 2.38"
 C85429 2.50"

(see C851xx-I for Individual flanges)



C855xx

Round C85527 2.25" Sonny's & CFE / Fulton
 C85528 2.38" Port center moved .180" left
 C85529 2.50"



Add *I* for Individual flanges



C8165xx

Oval C816547 2.25" CFE 5.0
 C816548 2.38" Sonny's 5x13
 C816549 2.50"

(see C8164xx-I for Individual flanges)



C8167xx

Round C816727 2.25"
 C816728 2.38"
 C816729 2.50"

(see C8166xx-I for Individual flanges)